


IMD-M

INSTRUCTIONS DE MISE EN SERVICE ET D'UTILISATION

GENERAL INSTRUCTION FOR USE AND COMMISSIONING

INFORMACIONES PARA LA PUESTA EN SERVICIO Y EL USO

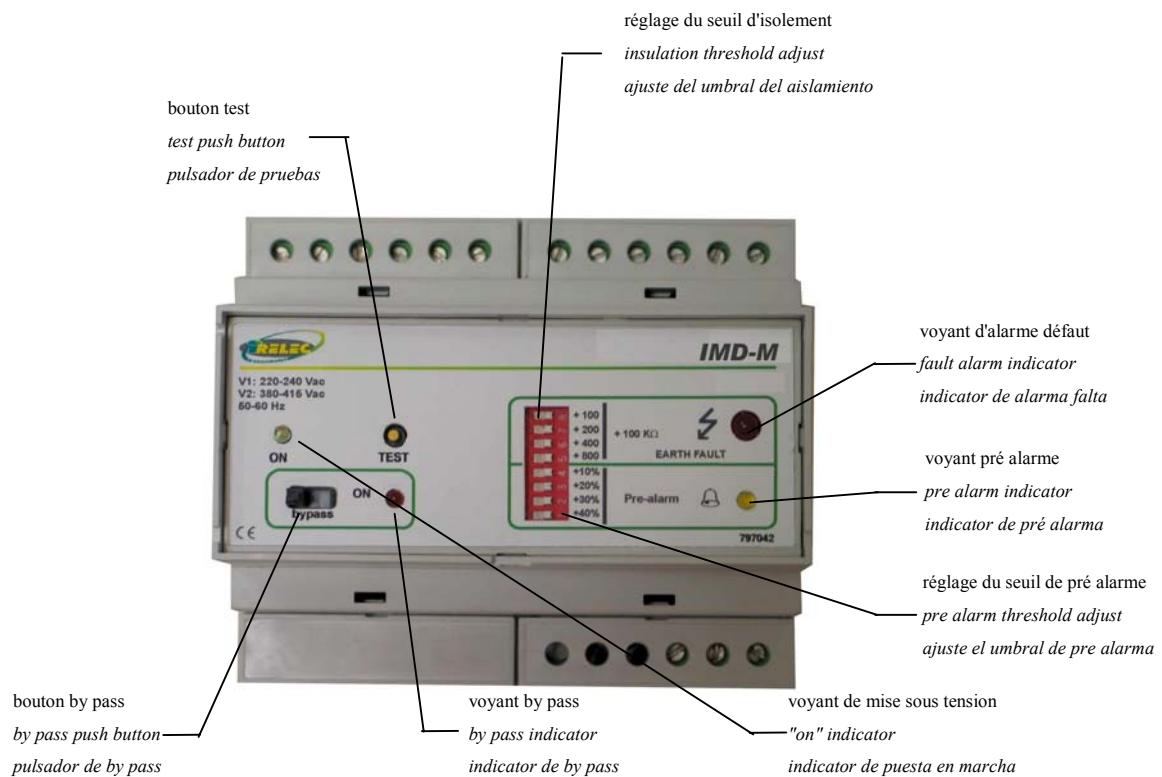




VARIANTES ET OPTIONS

PRODUCT RANGE AND OPTIONS

RANGO DE EQUIPOS Y OPCIONES


Désignation Type/tipo	afficheur display/pantalla	Tensions Voltages/tensiones		référence reference/referencia
		V1	V2	
IMD-M V1	non/no	24 Vac	48Vac	IR797040
IMD-M V2	non/no	110-127 Vac		IR797041
IMD-M V3	non/no	220-240 Vac	380-415 Vac	IR797042

MISE EN SERVICE COMMISSIONING PUESTA EN SERVICIO

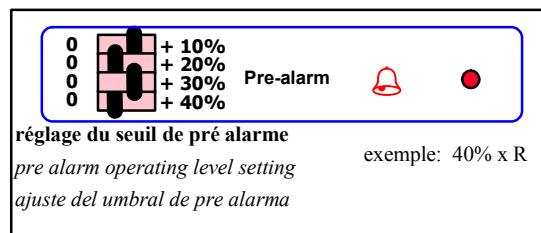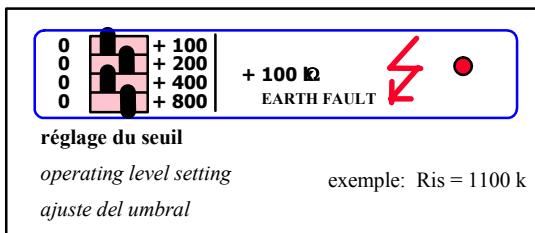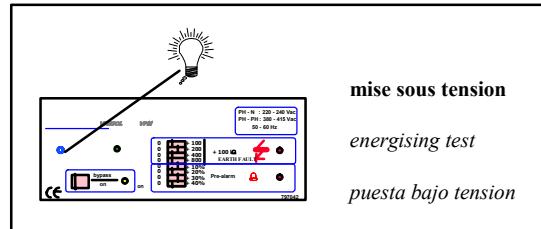


UTILISATION APPLICATION UTILIZACION


Absence de défaut/no fault/ausencia de falta

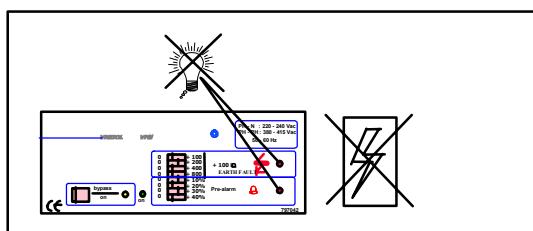


Activation alarme défaut/fault alarm presence/alarma de falta

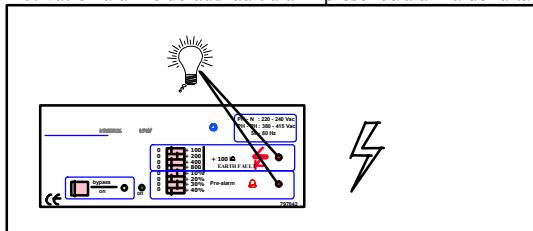

Activation pré alrme en % de Ris/
Pre alarm presence :%Ris/
Activacion pre alarma : Ris

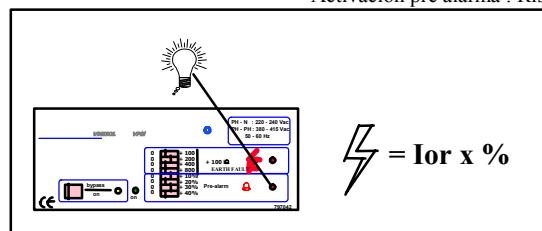

Démarrage forcé/forced starting/arranque forzado

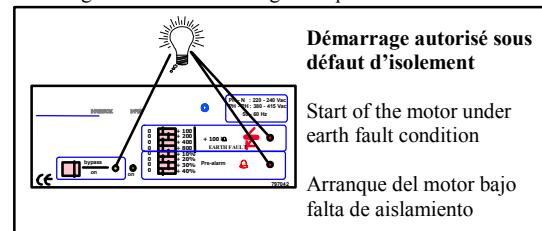

RACCORDEMENT / WIRING / CABLEADO

